

GhostBlind® Instruction Manual

GhostBlind® Predator



GhostBlind® Predator
Model GBP-04A (4 Panel Blind
w/shoulder strap)



Read and understand all instructions and warnings before using your

For any questions concerning the use of this product, visit www.GhostBlind.com and review our FAQ Section.

Your safety is your first priority with use of this product. Make sure you follow all gun and hunting safety laws in your area.

Revised 7-13-10

Setting Up Your GhostBlind®



The GhostBlind® was designed to be able to set up in a matter of seconds. Simply unfold the blind completely. The panels will set up at the correct angle every time. **Hint:** When handling your blind, use the observation holes. This will keep your fingerprints off of the mirror panels. You should practice opening and closing your blind before you go out to your hunting location. Tilt the reflective panels forward while unfolding to eliminate the chances of sun reflections


How to Tie Down Your GhostBlind®



Use the included string and tent stakes to secure your blind to the ground. Simply slip the looped end of the string through the holes in the end panels of the blind. If desired you can also tie down from the front by placing the toggle ball & string down in one or more of the V Shaped hinge areas as show. You may want to hang some small branches or vegetation on the string to avoid tripping over it and to give you additional concealment from the side view.



When storing your blind, it is always best to hang it on the wall using the observation ports.

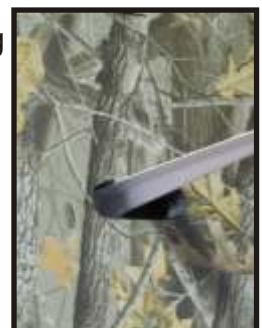

Take Care Not To Trip Over The Tie Down Strings

How to Clean Your GhostBlind®



Both the front and back side of your GhostBlind® can be hosed off and wiped dry with a soft cloth. Do not use any abrasive or harsh chemicals. Make sure you leave the blind stand up in an open position to air dry thoroughly before folding for storage to eliminate the chances of mold and mildew.

HINT: In some rare circumstances, it may be possible that the reflective surface fogs up similar to your eye glasses when you go from the cold outdoors into a warm house with a lot of humidity. This could happen if you leave your blind out overnight and the next morning, the air temperature warms up very quickly. To avoid this situation, you may want to wipe down the reflective surfaces with a product such as Rain-X Anti-Fog Wipes.

How to Carry GhostBlind®



First, slide the included bungee cords over the blind top keep it in a closed position while carrying. Use the included 2" shoulder strap to carry your blind. Simply insert the strap through the carry holes on the side of the blind as shown. Snap together the buckle and adjust to fit your height. **Hint:** You can slide your chair or other gear in behind the bungee cords to make carrying easier.

You may want to check out our New Optional Carry Bag with the "Total Gear Carry System"

Care of your GhostBlind® :

Your GhostBlind® is water resistant, not water proof and therefore should not be left standing or laying in water. We recommend you do not leave your blind outside overnight. If you leave the blind out overnight, the reflective panels may be covered with dew, ice or snow the next morning which reduces the effectiveness of your blind.

Normal use, even in the rain or snow will not hurt your GhostBlind®, but it should always be stored in a dry place. You should dry out the blind before folding for storage to eliminate mold and mildew.

Your GhostBlind® was designed for easy folding. You will notice all of the mirror panels fold to the inside to protect them while carrying or in transport.

Your GhostBlind® is made with flexible, shatter proof reflective panels, not glass mirrors. It is likely that the surface of the panels will become scratched or pitted. These marks will not reduce the effectiveness of your blind.

When cleaning your GhostBlind®, simply hose it off and dry with a soft cloth. Do not use paper towels as they may cause additional scratching.

Due to the lightweight construction of your GhostBlind®, you should always store it hung on the wall to avoid warping of the panels. If panels should warp, you can simply lay it flat to straighten out the panels.

When hanging up your GhostBlind®, use the observation ports

Field Tips:

As with any ground blind, proper placement is a must for maximum effectiveness.

You may want to place small branches over the tie down strings and tent stakes to avoid tripping.

Avoid the skyline when possible.

Avoid bumping your GhostBlind® especially when in close proximity of game.

When in close proximity of game, it is best to use the observation ports to eliminate any movement to avoid being busted.

You may want to de-scent the blind for best results.

When shooting a cross bow, make sure to stay back from the blind sufficiently enough to avoid the bow from hitting the blind.

Warnings:

Special care should be taken when in the presence of other gun hunters. Make sure all hunters know where you are located as they cannot see you when concealed behind your blind.

Hunter orange should always be displayed above and near your GhostBlind® as well as wearing hunter orange as dictated by State and Federal hunting laws.

Hunter should keep in mind that if you are wearing a hunter orange vest or jacket, and you are carrying the blind on your back, it is possible that your hunter orange may not be able to be seen from the rear view. It is advisable to place hunter orange on the back of the blind or on your back pack.

**GhostBlind® Industries, Inc. is not responsible for your safety.
Hunters are responsible to comply with all gun, safety and hunting laws.**