

GhostBlind™ Instruction Manual

GhostBlind™ Predator & GhostBlind™ Phantom Instructions

Your GhostBlind™ Includes the Revolutionary “Total Gear Carry System™,”



Your GhostBlind comes equipped with straps to comfortably carry all of your gear on your back leaving both hands free for your weapon!

Use the slide adjustments on the padded shoulder harness to adjust your blind to fit your body comfortably. You should only have to make these adjustments one time.



The strap on any existing back pack simply goes through the observation port and is fastened with the included strap as shown.

Read and understand all instructions and warnings before using your GhostBlind™.

For any questions concerning the use of this product, visit www.GhostBlind.com and review our FAQ Section.

Your safety is your first priority with use of this product. Make sure you follow all gun and hunting safety laws in your area.

GhostBlind™ Predator Model GBP-04 (4 Panel Shoot Through Blind)



The GhostBlind™ Predator consist of 4 hinged panels and measures 102" wide by 46" high and when set up, gives approximately 160 degrees of concealment. Lightweight design making it very easy to carry with shoulder harnesses. Shoot Through design makes it easy to shoot gun, bow or cross bow from seated position.

GhostBlind™ Phantom Model GBP-02 (2 Panel Shoot Through Blind)



The GhostBlind™ Phantom consist of 2 hinged panels and measures 51" wide by 46" high and when set up, gives approximately 80 degrees of concealment. The Phantom is very easy to carry with the included shoulder harness. Shoot Through design makes it easy to shoot gun, bow or cross bow from seated position.



When storing your blind, it is always best to hang it on the wall using the observation ports.



Setting Up Your GhostBlind™:



The GhostBlind™ was designed to be able to set up in a matter of seconds. Simply unfold the blind completely. The panels will set up at the correct angle every time.

Hint: When handling your blind, use the observation holes. This will keep your fingerprints off of the mirror panels.

Tie Downs & Panel Closures



Use the included string and tent stakes to secure your blind to the ground. Simply slip the looped end of the string through the D-Ring as shown. If desired you can also tie down from the front by placing the toggle ball & string down in the V Shaped hinge area in center of blind as show. When transporting and during storage, always keep all 5 closure straps snapped closed at all times to avoid accidental opening of the blind. You may want to hang some small branches or vegetation on the string to avoid tripping over it and to give you additional concealment from the side view.

See Through Ports



Use the Observation Ports or shoot through ports when in close proximity to game.



Your New GhostBlind™ has a very unique feature. When folded, all of the mirror panels face the inside and are protected when in transport or being carried in and out of the woods.

Back side of blind is covered with easy to clean camouflage vinyl. Simply wipe off with a cloth or hose of if your blind gets dirty. Allow to dry before folding for storage

Care of your GhostBlind™ :

- Your GhostBlind™ is water resistant, not water proof and therefore should not be left outside overnight.
- Normal use, even in the rain or snow will not hurt your GhostBlind™, but it should always be stored in a dry place. You should dry out the blind before folding for storage to eliminate mold and mildew.
- Your GhostBlind™ was designed for easy folding. You will notice all of the mirror panels fold to the inside to protect them while carrying or in transport.
- **Your GhostBlind™ is made with flexible, break proof reflective panels, not glass mirrors. It is likely that the surface of the panels will become scratched or pitted. These marks will not reduce the effectiveness of your blind.**
- When cleaning the reflective surfaces, use a soft cloth and window cleaner if desired. Do not use paper towels as they may cause additional scratching.
- Due to the lightweight construction of your GhostBlind™, you should always store it hung on the wall to avoid warping of the panels.
- When hanging up your GhostBlind™, use the observation ports

Field Tips:

As with any ground blind, proper placement is a must for maximum effectiveness.

You may want to place small branches over the tie down strings and tent stakes to avoid tripping.

Avoid the skyline when possible.

Avoid bumping your GhostBlind™ especially when in close proximity of game.

When in close proximity of game, it is best to use the observation ports to eliminate any movement to avoid being busted.

You may want to de-scent the backside fabric for best results.

When shooting a cross bow, make sure to stay back from the blind sufficiently enough to avoid the bow from hitting the blind.

Warnings:

- Special care should be taken when in the presence of other gun hunters. Make sure all hunters know where you are located as they cannot see you when concealed behind your blind.
- Hunter orange should always be displayed above and near your GhostBlind™ as well as wearing hunter orange as dictated by State and Federal hunting laws.
- Hunter should keep in mind that if you are wearing a hunter orange vest or jacket, and you are carrying the blind on your back, it is possible that your hunter orange may not be able to be seen from the rear view. It is advisable to place hunter orange on the back of the blind or on your back pack.

**GhostBlind™ Industries, Inc. is not responsible for your safety.
Hunters are responsible to comply with all gun, safety and hunting laws.**

GhostBlind™ Industries, Inc.

PO Box 644

Marietta, Ohio 45750