



Deluxe Carry Bag Instructions



Our latest model (October 2010) Deluxe Carry Bag, opens up flat to make it easy to put the blind into. The bag can also be opened up and placed across your legs for warmth or to keep you dry while hunting



Zip up the bag all the way around the blind. There are 4 straps that go all the way around the bag (2 vertical and 2 horizontal). Insert the end of the strap through the corresponding loop on the opposite side and cinch down snugly as shown below. This is very important as these straps are designed to carry the weight of the blind rather than the camo fabric.



Attach Chair & Back Pack



Attach your chair by using the 2 narrow straps with velcro, located on the top side of bag, opposite the shoulder carry harnesses as shown.



Use the pocket on the back side for your tent stakes and tie downs.



Attach your back pack with the hook located just under the chair straps. There are several D-Rings located on the back side of the bag to attach any gear you desire by using existing bungee cords or hardware.

Adjusting Shoulder Harnesses to Fit Your Body



Bottom Strap



There are 2 adjustable straps between the 2 shoulder harnesses. The top one goes behind your neck on your shoulders, not in front of your neck. The purpose is to keep the shoulder harnesses from sliding off or your shoulders. Depending on the width of your shoulders, this strap may or may not be needed. If not needed, you can simply remove it by cutting off with a sissors.



Top Adjustment



Bottom Adjustments

Adjusting the shoulder harnesses to fit your body: First, you should adjust the top straps to about 2" and adjust the bottom straps to almost their maximum size. After putting the bag with the blind inside on your shoulders, snap the front bottom strap together and adjust.



The final step is to snug up the bottom adjustments if needed as shown.